 


# INSTRUCTION MANUAL

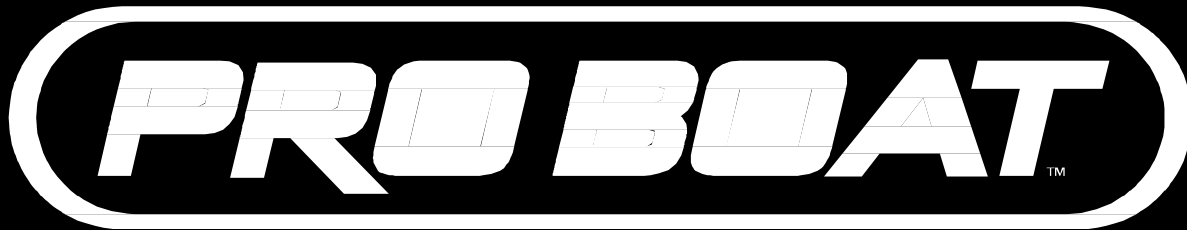

## PISTOL GRIP RADIO CONTROL SYSTEM

### I. INTRODUCTION

Congratulations on your purchase of the ProBoat 27MHz AM pistol grip radio control system which has been manufactured and assembled with the greatest care.

We are confident that you will be delighted with your purchase. Please read the instructions thoroughly, noting all points before use, in order to avoid mistakes in handling and operation.

### II. COMPONENTS AND SPECIFICATIONS

Your ProBoat Radio includes the following items:

Transmitter .....	PB-2P
2-Channel Receiver.....	AMR-2/27
2 Servos .....	AMS-16
Accessories .....	B.E.C. Switch Harness and Servo Accessories

#### TRANSMITTER SPECIFICATIONS:

Antenna Output .....	500mW
Frequency, .....	27 MHz
Modulation .....	AM
Power Supply, .....	9.6V D/C
Dimensions .....	8.15" x 7.00" x 3.35"
Weight.....	13 oz

#### RECEIVER SPECIFICATIONS Intermediate

Frequency:.....	455kHz Band
Width:.....	5kHz / -6db
Dimensions: .....	1.12" x 1.72" x 0.67" (28mm x 43mm x 16.7mm)
Weight: .....	0.7oz (18 g)

#### SERVO SPECIFICATIONS

Torque: .....	50 oz/in (3.0 kg / cm) @ 4.8V
.....	60 oz/in (4.2 kg / cm) @ 6.0V
Speed: .....	.22 sec / 60 degrees @ 4.8V
.....	.18 sec / 60 degrees @ 6V
Size: .....	0.72" x 1.51" x 1.36" (18mm x 37.7mm x 34mm)
Weight: .....	1.3 oz (34 g)

### III. R/C SAFETY PRECAUTIONS

For safe and reliable performance of your R/C model, please carefully read and follow these guidelines:

1. Radio control models are not toys. They are capable of inflicting serious injury to people and property. Use caution at all times when operating your model.
2. You are responsible for the safe operation of your R/C model. You must properly install, test, and operate your model with a clear sense of that responsibility. Do not take risks that might endanger yourself or others.
3. Running an R/C car in the streets is very dangerous to both drivers and models. Avoid running your model in areas occupied by full-size automobiles. To locate areas where you can safely operate your model, contact your local hobby shop for R/C tracks or clubs in your area.
4. When running an R/C boat, keep it away from any swimmers, full-size boats, or wildlife. Also, watch carefully for fishing lines that can entangle the propeller.

5. Before operating your model, make sure your frequency is clear. If someone else is operating on the same frequency, both models will go out of control, possibly causing damage to the models, as well as others.
6. If at any time while operating your R/C model you sense abnormal model functioning, end your operation immediately. Do not operate your model again until you are certain the problem has been corrected.

**CAUTION:** Control of your model is impossible without sufficient voltage for the transmitter and receiver. A weak transmitter battery will decrease your range of operation and a weak receiver battery will slow servo movement and decrease your range of operation. Check your receiver pack voltage often to avoid losing control of your model. When using a model that operates both the electric motor and the receiver from the same battery (Battery Eliminating Circuitry or B.E.C.), you should discontinue use when the top speed sharply decreases or you will quickly lose control of your model.



## IV. OPERATING YOUR MODEL

It is important to learn the proper sequence for switching ON/OFF your radio system: **BEFORE OPERATION:** Switch on the transmitter, then the receiver. **AFTER OPERATION:** Switch off the receiver, then the transmitter.

 
 
This ensures that you will always have a signal to the receiver, and your R/C model will not operate out of control when you turn off the transmitter.

## V. INSTALLATION

### SERVO FEATURES

- A tight deadband amplifier ensures accurate neutral centering
- Low current drain
- An indirect drive feedback potentiometer gives additional protection from vibration
- State-of-the-art surface mount technology (SMT)

### SERVO LAYOUT

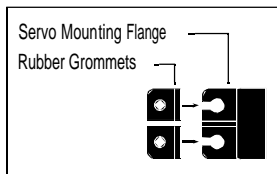
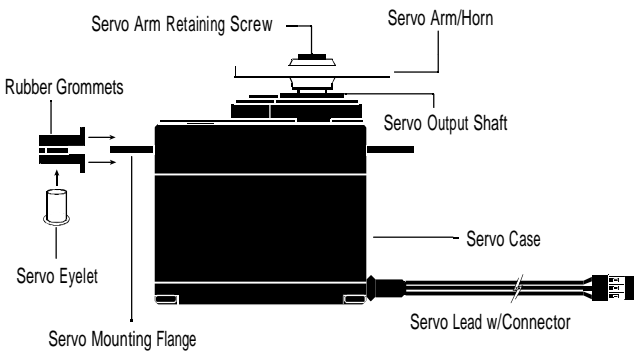


TOP VIEW


Your AMR-2/27 Receiver has Battery Eliminator Circuitry (B.E.C.). The receiver gets its power from the model's NiCad battery pack, thus saving the weight of an additional receiver battery. NiCad batteries from 4.8-8.4V (4-7 cells) can be used safely. Higher voltage packs may damage the receiver and servos. **ATTENTION:** Make sure the male and female connectors have the correct polarity (+/-) before connecting. The servo lead and receiver case are molded so that the lead can only be inserted correctly. Be sure to orient the servo plug correctly for proper insertion.

You may use a separate battery to power the receiver (such as for some electric boats or in gas-powered vehicles). A NiCad pack plugged into the BATT socket on your receiver will operate your receiver.

 
 
If you use a mechanical speed controller, please ensure that it has the correct connector for a B.E.C. system (red connector). See FIGURE A for a typical setup. Most electronic speed controllers are set up for B.E.C. operation and plug directly into your receiver (Function 2). See FIGURE B for a typical setup and check your speed controller's manual for correct installation. You should use the black rubber servo cushions whenever possible to decrease your servo's sensitivity to vibration.

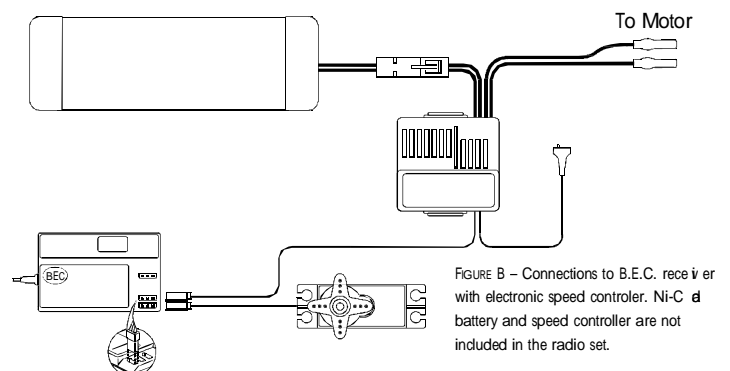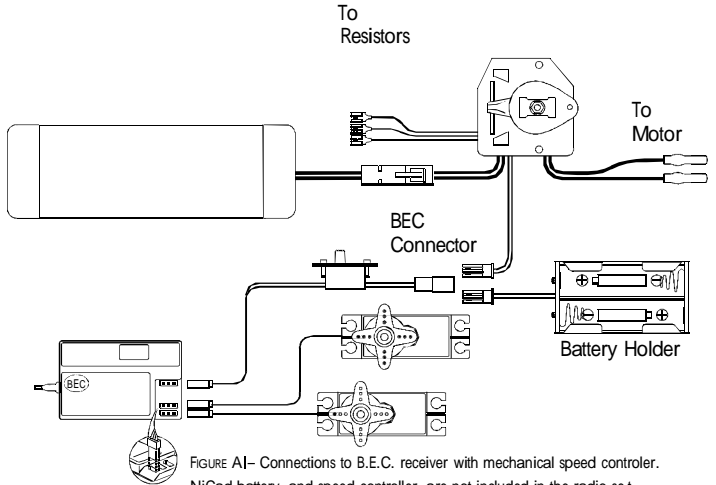

## VI. IDENTIFICATION OF TRANSMITTER PARTS

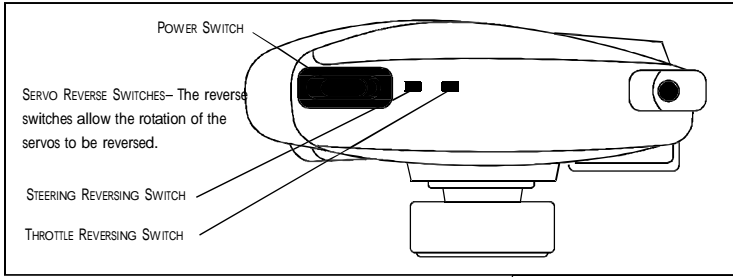 

  STEERING WHEEL — The steering wheel rotates 35° to the left and to the right.

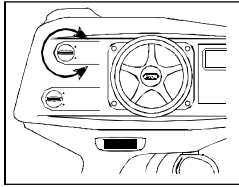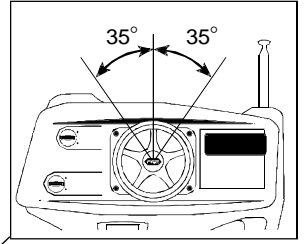


STEERING TRIM — Rotate the top trim tab to adjust and obtain the neutral position of the steering servo.


HINT: 4FIUOH ZPVS TIFFSJOH UOLBHF

. BLF TVSF ZPVS TIFFSJOH SBIF BEWTFIS TFF DBII PWI BI SIHII JT TRUUP IIF NBY:NVN OPTUPO BOE ZPVS TIFFSJOH ISJN JT DFOIFSFE

 0 PO IIF QPXFS UP ZPVS SFDF:WFS UP DFOIFS IIF TIFFSJOH TFSNP BOE TFIUUP UOLBHF QPS NBY:NVN ISBIIFI 5 IFO VTF IIF SBIF BEWTFIS UP BEWTFI IIF BNPVOTI PISBIIFI ZPV OFFE

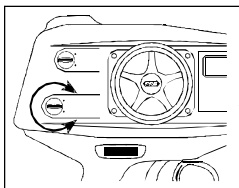


 THROTTLE TRIM— Rotate the bottom trim knob to adjust and obtain the neutral position of the throttle servo.

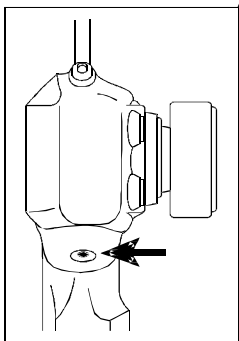


CHARGING JACK— Your ProBoat transmitter can be upgraded to NiCad batteries using the optional Dynamite DYN1900 NiCad Conversion Kit.

 POLARITY: (Center pin negative)

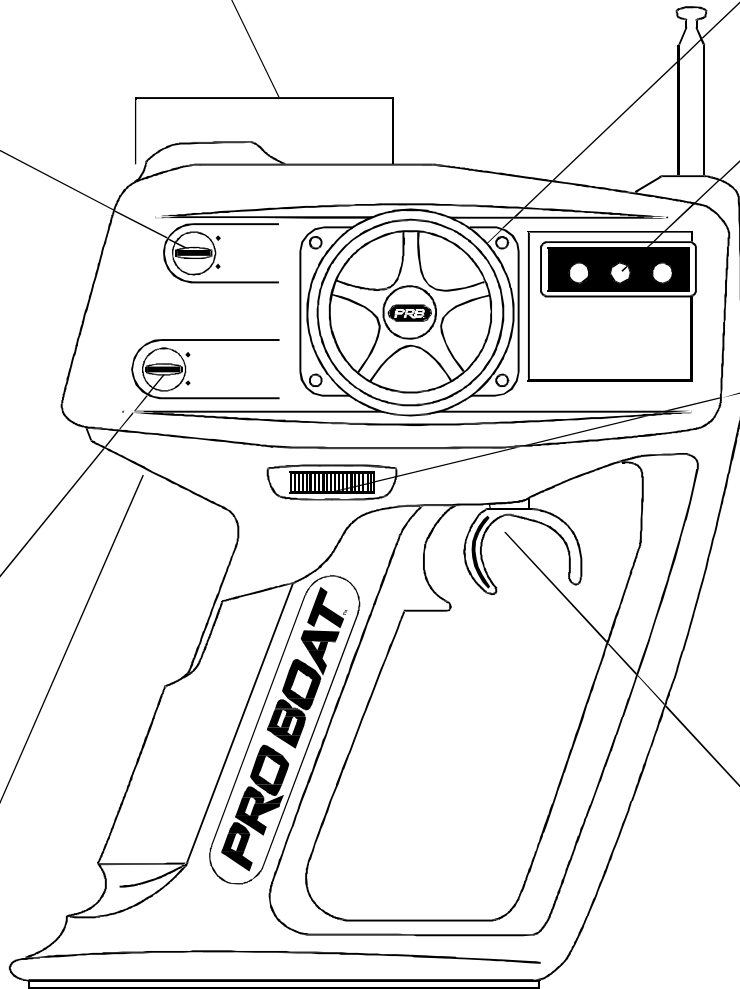


 LED VOLTAGE METER— If the meter indicates green, your batteries are approximately full strength. If the meter indicates orange or red, the batteries are weak and need to be replaced with new cells or charged if you are using rechargeable "AA" NiCads.

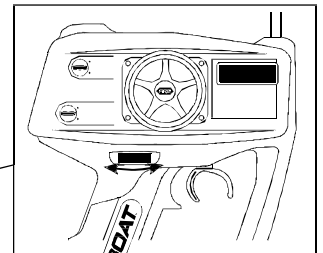


STEERING RATE ADJUSTER — The steering rate adjuster affects the throw of the steering servo. The output can be adjusted from approximately 10% to 100%. The throw of the servo decreases as you move the dial to the left.

 HINT: 6TF IUT UP EFOFSBTF IIF TFOUJUIZ PIS ZPVS TIFFSJOH PO IIPPTF DPVSTFT BOE PO DPVSTFT XUUPWI UHII DVSIFT

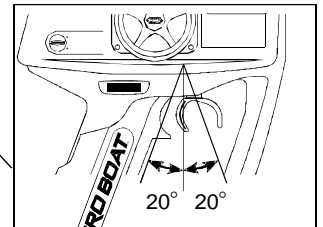

 THROTTLE TRIGGER — The throttle trigger moves 20° in the forward and reverse direction.

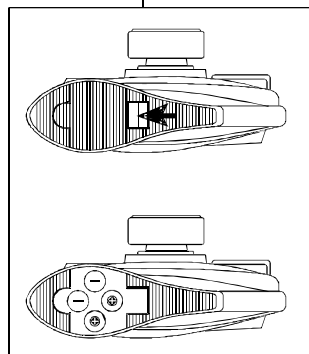


BATTERY CASE — To remove the battery cover, slide the tab in the direction of the arrow while pushing the rounded tab.

Install the 8 "AA" batteries according to the diagram.

If the transmitter voltage fails to register, check for the correct installation of the batteries and make sure the batteries still have a charge.

### BACK OF TRANSMITTER

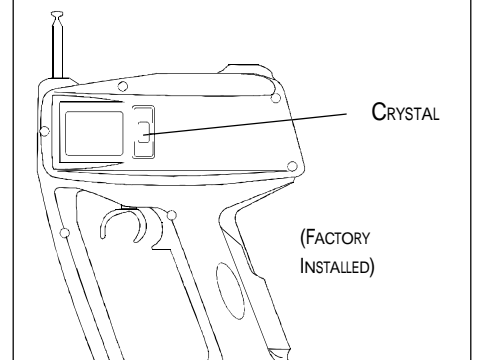 

## VII. PARTS LISTING

PRB8023	AMR-2/27 Receiver
PRB8024	AMS-16 Servo
PRB8027	Switch Harness
PRB8028	Receiver Battery Holder
PRB8029	Servo Gear Set PRB8030
	Servo Case Set PRB8031
	Servo Accessory Set

## VIII. FREQUENCY CHART

FREQUENCY (MHz)	CHANNEL
26.995 .....	1
27.045 .....	2
27.095 .....	3
27.145 .....	4
27.195 .....	5
27.255 .....	6

## X. WARRANTY AND SERVICE INFORMATION

**IMPORTANT NOTE:** Be sure to keep your original dated sales receipt in a safe place as you will be required to provide proof of purchase date for the equipment to be serviced under warranty.

**WARRANTY COVERAGE** Your new Pro Boat™ Remote Control Radio System is warranted to the original purchaser against manufacturer defects in material and workmanship for 365 days from the date of purchase. During this period, Pro Boat™ will repair or replace, at their discretion, any component that is found to be factory defective at no cost to the purchaser. This warranty is limited to the original purchaser of the unit and is not transferable. This warranty does not apply to any unit which has been improperly installed, mishandled, abused or damaged in a crash, or to any unit which has been repaired or altered by any unauthorized agencies. Under no circumstances will the buyer be entitled to consequential or incidental damages.

This limited warranty gives you specific legal rights; you also have other rights which may vary from country to country. As with all fine electronic equipment, do not subject your radio system to extreme temperatures, humidity or moisture. Do not leave it in direct sunlight for long periods of time.

### REPAIR SERVICE DIRECTIONS

In the event that your Pro Boat™ radio needs service, please follow the instructions listed below.

1. Check all on/off switches to be sure they are off. This will speed the repair process of checking battery condition.
2. Return your system components only (transmitter, receiver, servos, etc.) Do not return your complete system, installed in a model car, boat, etc.
3. Include detailed information explaining your operation of the system and problem(s) encountered. Provide an itemized list of equipment enclosed and identify any particular area/function which may better assist our technicians in addressing your concerns. Date your correspondence, and be sure your complete name and address appear on this enclosure.
4. Include your name, mailing address, and a phone number where you can be reached during the business day.
5. **WARRANTY REPAIRS.** To receive warranty service you must include your original dated sales receipt to verify your proof-of-purchase date. Providing that warranty conditions have been met, your radio will be repaired without charge.
6. **NORMAL NON-WARRANTY REPAIRS.** Should your repair cost exceed 50% of the retail purchase cost, you will be provided with an estimate advising you of your options.
7. Inside the U.S., send your radio system to:  
Horizon Service Center  
4105 Fieldstone Road  
Champaign, Illinois 61821  
217.355.9511  
Outside the U.S., contact the original point of sale for specific warranty information.