

# Pro-Line Beadlock Wheel Instructions

**Important:** Please read all instructions prior to assembling beadlock wheels.

**7**

**Pieces included:**


4-40 x 1/4" screws x 76 pieces  
Aluminum beadlocks x 4

Chrome beadlock wheels x 2


**Prior to mounting your tire:**

The beadlock wheel was designed to capture your tire without the use of glue. Tire changing is now easier and more affordable than ever before. The mounting bead utilizes a unique mounting surface. Please note that prior to mounting your tires, you must ensure that the bead of the tire is correct. All existing 40 Series Pro-Line tires have been updated utilizing the new mounting bead. However, older stock of 40 Series tires and other manufactures of 40 Series size tires will need to be modified. Figure 1 illustrates the older shaped bead while Figure 2 illustrates the new one. Trim the bead if needed.

**Figure 1**

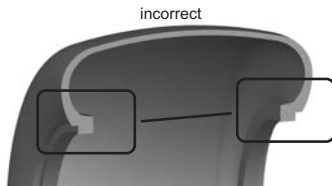

**Figure 2**

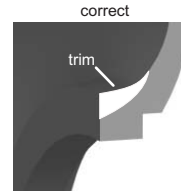

**2**

- Remove beadlock from wheel..
- Slide tire with foam insert over the beadlock wheel foam.



**3**

- Place beadlock on wheel. Start one screw at a time and thread to a snug fit. Complete 2 full revolutions around wheel to insure proper installation.

**Important:** Do not over tighten screws. Snug screws working your way around the wheel. Complete 2 full revolutions around wheel.

