


Gluing Tips for Chrome Wheels

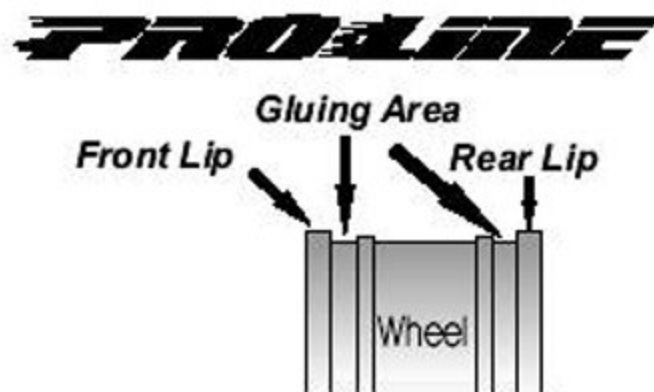

Important Information: For best tire mounting results, remove chrome finish from the front and rear lip of the wheel. Use a 100 grit sand paper or remove carefully by scraping off with a sharp exacto knife. Thank you for supporting Pro-Line and good luck racing!

Additional Important Information: These wheels were designed for ongoing abuse. They are made of a super-tough nylon ensuring less breakage and greater durability. The chrome process, however, is for appearance only. **This chroming process is not chip resistant and will chip off under normal use.** Please note that any chroming issues will not be warranted. Thank you for purchasing Pro-Line products.