

XR2

2 Channel, 2 Model Memory
AM Computer Racing System



JR RACING

Table of Contents

Introduction to the XR-2 Radio System	2	Lithium Battery	9
XR-2 Quick Start Setup	3	Memory Backup Screen	9
Systems Features	4	Accessing the System Mode	10
Transmitter Features	4	Model Name Entry	10
Receiver Features	4	Data Reset	11
Servo Features	4	Accessing the Function Mode	12
System Specifications	4	Model Select	13
System Components	4	Travel Adjust	14
Transmitter Specifications	4	Steering Rate	15
Receiver Specifications	4	Sub-Trim	16
Servo Specifications	4	Servo Reversing	17
Control Identification and Location	5	Accessing the Direct Trim Mode	18
Steering Tension Adjustment	6	Steering Trim	19
Charging Jack	6	Throttle Trim	19
R/C Safety Precautions	6	Steering Dual Rate Trim Adjustment (Grip Lever B)	20
Receiver/Servo Connections and Installation	7	Brake Endpoint Adjustment BRG (Grip Lever A Throttle Travel Adjust)	21
Operating Your Model	8	XR-2 Data Sheet	22
Servo Layout	8	Frequency Chart	22
Key Input and Display	8	Warranty and Service Information	23
Display Screens	9		
Normal Display Screen	9		
Low Battery Screen	9		

Introduction to the XR-2 Radio System

Thank you for purchasing the XR-2 two-channel radio system. This system has been designed to provide the R/C racer with a high quality, user friendly radio system that can be depended upon year after year, race after race. It is important that you carefully read this manual before attempting to operate your XR-2 system. For your convenience, a blank data sheet has been included in the back of this manual. Once you have input all the necessary data for a particular


model into your transmitter, we strongly recommend that you immediately write that information down on the data sheet provided. This insures that, in the rare case of a memory failure, you will not lose your models' set-up data.

For those who would like to get out to the track quickly with just the basic radio set-up, please refer to the Quick Start section that follows.


XR-2 Quick Start Setup

In this manual you'll find in-depth instructions detailing all the steps and procedures you'll need to follow in order to program each of the XR-2's features correctly. For those racers who want to get to the track fast, we have provided the Quick Start section below. Quick Start covers the basic programming information necessary to get you to the track fast. Later, when you want to learn more about the specific features of the XR-2, refer to the appropriate page(s) in this manual for more detailed programming information. **Servo**


Reversing

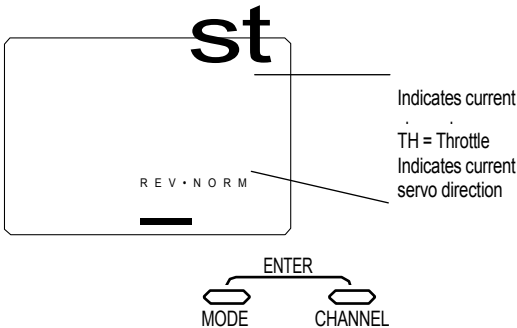


1. With the transmitter power switch on, press the MODE key to enter the Function Mode.



2. Press the MODE key four times until ST appears on the screen. The ST indicates the steering servo reversing screen.




3. Press the increase or decrease key to move the cursor to the desired servo direction (Rev.Norm).



4. Press the CHANNEL key once to access the throttle servo reversing screen.

5. To select the direction of the throttle servo, repeat Step 3 above.

Travel Adjustment

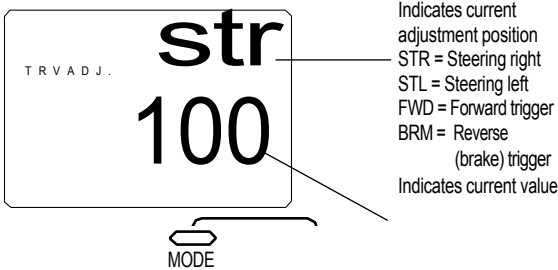

1. From the Servo Reverse function, press the MODE key twice to access the Travel Adjustment function (the STR or STL screen will appear).




Steering Adjustment:

2. Rotate the steering wheel in the desired direction (left or right) to be adjusted.
3. Press the INCREASE or DECREASE keys to select the desired travel value.

Throttle Adjustment:

4. Press the CHANNEL key once. FWD will appear on the screen.
5. Press the INCREASE or DECREASE keys to select the desired travel value.
6. Press the MODE and CHANNEL keys at the same time to exit the Function Mode.

Servo Trim Adjustment

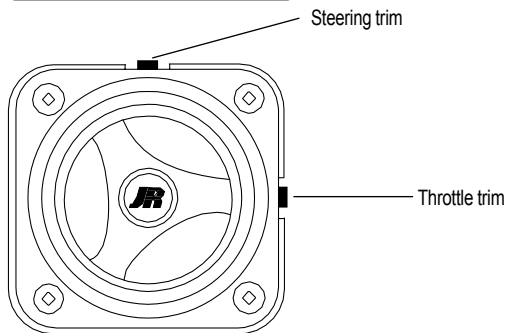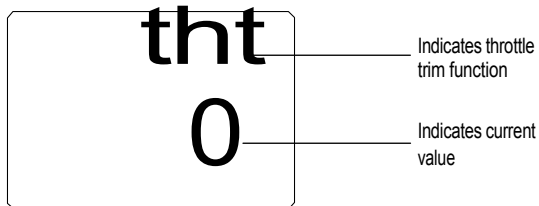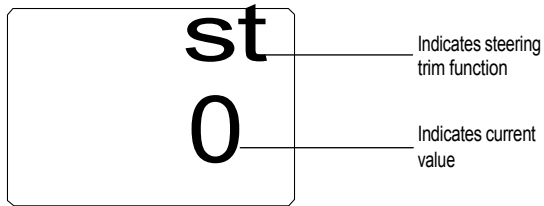

Steering Servo Trim Adjustment:

1. With the transmitter power switch on, move the digital steering trim lever in the desired position to be adjusted. The steering trim value screen will appear automatically.

Throttle Servo Trim Adjustment:

2. With the transmitter power switch on, move the digital throttle trim lever in the desired position to be adjusted. The throttle trim value screen will appear automatically.

System Features

Transmitter Features

- Two Channels
- AM modulation
- Easy-to-read LCD graphics display
- Two model memory
- Three-digit model name entry
- Electronic digital trim levers for throttle and steering
- Two assignable electronic grip levers
- Direct display trim function
- Servo reversing
- Sub-trim
- Steering dual rate
- Steering endpoint adjustment (two points — left and right)
- Brake/throttle point adjustment
- Low battery alarm
- Plug-in crystals
- Charge jack receptacle (rechargeable batteries not included, order JRPB958)

R-122 Receiver Features

- Two Channels
- AM modulation
- 27MHz/75MHz available
- Battery eliminator circuitry (BEC)
- Patented ABC&W interference technology

Z250 Servo Features

- Zero deadband amplifier for accurate neutral centering
- Low current drain
- Indirect drive feedback potentiometer for additional vibration protection
- Surface Mount Technology (SMT)
- Durable nylon gear train for long life

System Specifications

System Components

System name	XR-2
Transmitter	NET XR-2
Receiver	R-122
Servos	Z250x2 (1 if equipped with ESC speed control)
Accessories	B.E.C. switch harness with battery case Servo accessories (for two servos) Instruction manual

XR-2 Transmitter Specifications

Model number	XR-2
Encoder	2-channel computer system
RF output	27/75 MHz
Modulation	AM modulation
Output power	195.0 Mw
Current drain	150 mA
Power source	1.2V x 8 dry cell (1.2V \times 8 NiCad 600 mAh optional)
Output pulse	1000-2000 (1500 neutral)

R-122 Receiver Specifications

Model Number	NER-122
Type	2-channel/AM ABC&W circuitry
Frequency	27/75 MHz
Sensitivity (microseconds)	5qs minimum
Selectivity	8 KHz/50dB
Weight (oz)	.88 oz
Size (in) (WxLxH)	1.26" \times 1.76" \times .87"
Receiver antenna	14.75"
Power Supply	4.8-6.0V D/C

Z250 Servo Specifications

Torque (oz/in)	40.3 oz/in
Speed	25sec/60
Weight (oz)	1.47 oz
Size (in) (WxLxH)	0.73x1.52x1.32
Motor	3-pole ferrite type

Control Identification and Location



*To remove, press down where it says "press" and push the cover in the direction of the arrow. Remove the battery case and install eight AA batteries in the direction shown as molded into the battery case. If transmitter voltage fails to register, check for correct battery installation and voltage.

R/C Safety Precautions

For safe and reliable performance of your R/C model, please carefully read and follow these guidelines:

1. Radio control models are not toys. They are capable of inflicting serious injury to people and property. Use caution at all times when operating your model.
2. You are responsible for the safe operation of your R/C model. You must properly install, test and operate your model with a clear sense of that responsibility. Do not take risks that might endanger yourself or others.
3. Running an R/C car in the streets is very dangerous to both drivers and models. Avoid running your model in areas occupied by full size automobiles. To locate areas where you can safely operate your model, you should contact your local hobby shop for R/C tracks or clubs in your area.
4. When running an R/C boat, keep it away from any swimmers, full size boats, or wildlife. Also, watch carefully for fishing lines that can entangle the propeller.
5. Before operating your model, make sure your frequency is clear. If someone else is operating on the same frequency, both models will go out of control, possibly causing damage to the models as well as others.
6. If at any time while operating your R/C model you sense abnormal model functioning, end your operation immediately. Do not operate your model again until you are certain the problem has been corrected.

CAUTION: Control of your model is impossible without sufficient voltage for the transmitter and receiver. A weak transmitter battery will decrease your range of operation and a weak receiver battery will slow servo movement and decrease your range of operation. Check your receiver pack voltage often to avoid losing control of your model. When using a model that operates both the electric motor and the receiver from the same battery (Battery Eliminating Circuitry or B.E.C.), you should discontinue use when the top speed sharply decreases or you will quickly lose control of your model.


Steering Tension Adjustment

Steering tension is adjustable via the recessed screw located beneath the steering wheel (see page 5 for exact location). Turning the screw clockwise increases the steering tension.


Charging Jack

Located on the right-hand side of the transmitter is the charging jack, which accepts only JR wall chargers. Please do not attempt to use any other brand of wall charger as it may be reverse polarity and can cause damage to your system. Only use the JR wall charger when the XR-2 is equipped with Ni-Cad batteries (not included, JR PB958).

JR TRANSMITTER CHARGE JACK POLARITY:



Charger Pigtail For Transmitter

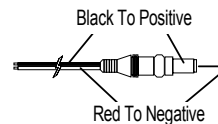

Receiver/Servo Connections and Installation

Your R-122 Receiver is equipped with Battery Eliminator Circuitry (B.E.C.). The receiver gets its power from the model's Ni-Cad battery pack, thus saving the weight of an additional receiver battery. Ni-Cad batteries from 4.8–8.4V (4–7 cells) can be used safely. Higher voltage packs may damage the receiver and servos.

Note: When using a separate receiver Ni-Cad as a power source, the operating voltage range is 4.8–6.0V (4–5 cell)

Attention: Make sure the male and female connectors have the correct polarity (+/-) before connecting. The servo lead and receiver case are molded so that the lead can only be inserted correctly. Be sure to orient the servo plug correctly for proper insertion.

You may use a separate gas to power the receiver (such as for some electric boats or in gas-powered vehicles). A Ni-Cad pack plugged into the BATT socket on your receiver will operate your receiver. You may also use alkaline batteries with the included battery box.

If you use a mechanical speed controller, please make sure that it has the correct connector for a B.E.C. system (red connector). See Figure A below for a typical set-up.

Most electronic speed controllers are set up for B.E.C. operation and plug directly into your receiver (Function 2). See Figure B for a typical set-up and check your speed controller's manual for correct installation.

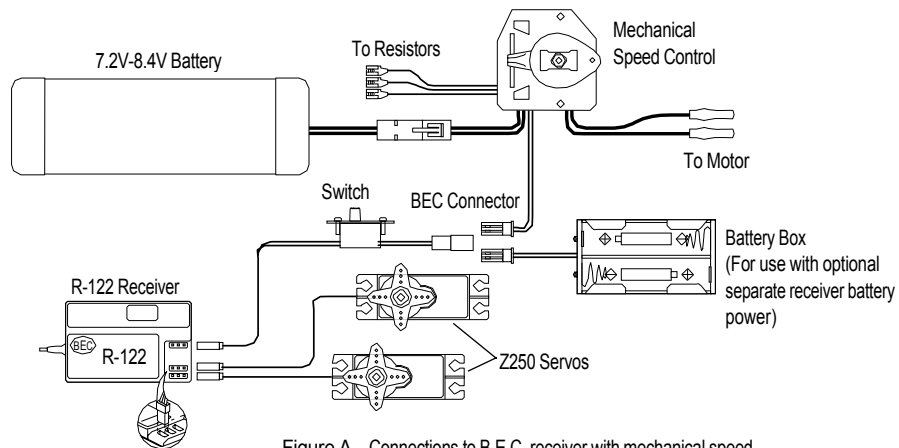


Figure A – Connections to B.E.C. receiver with mechanical speed controller. Ni-Cad battery and speed controller are not included in the radio set.

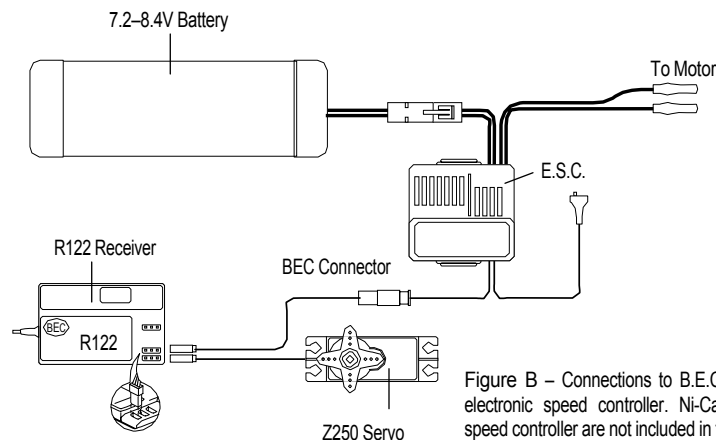


Figure B – Connections to B.E.C. receiver with electronic speed controller. Ni-Cad battery and speed controller are not included in the radio set.

Operating Your Model

It's important to learn the proper sequence for switching on/off your radio system:


BEFORE OPERATION: Switch on the transmitter, then the receiver.

AFTER OPERATION: Switch off the receiver, then the transmitter.

This ensures that you will always have a signal to the receiver, and your R/C model will not operate out of control when you turn off the transmitter.

Servo Layout



Note: Rubber grommets and (sometimes) eyelets are used in fuel-powered vehicles.

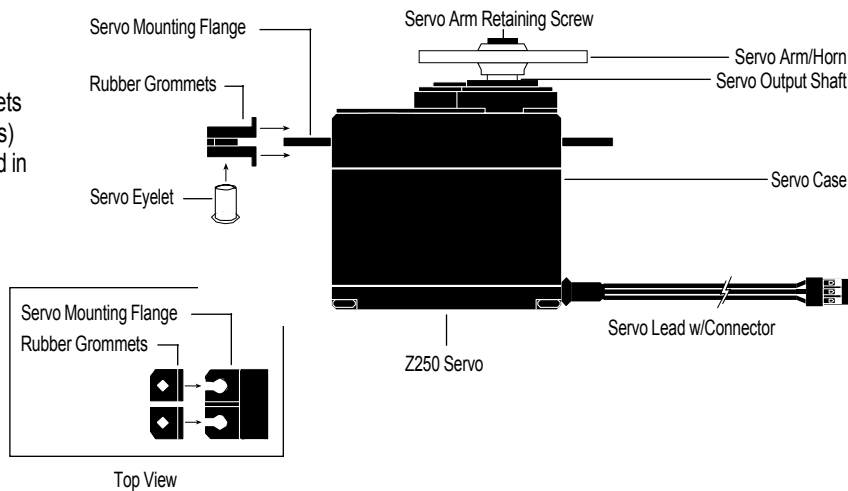

Key Input and Display

KEY	USE
MODE	Used to move up through the available functions
CHANNEL	Used to select the desired channel
INCREASE	Used to increase the value of the selected function
DECREASE	Used to decrease the value of the selected function

To enter the System Mode press the MODE and CHANNEL keys simultaneously and hold while turning on the transmitter.

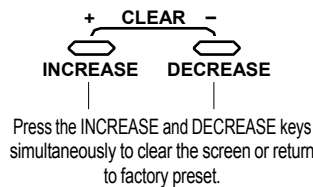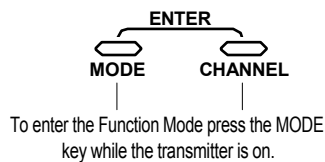


Display Screens

Normal Display Screen

When the power switch is turned on, the LCD screen will read as shown here in the diagram. This screen is referred to as the Normal Display.

Note: If any of the electronic trim buttons are moved while in this screen, the screen will automatically change to display the trim in use. This is called the Direct Trim Mode. For more information on the feature, please see page 19 of this manual.

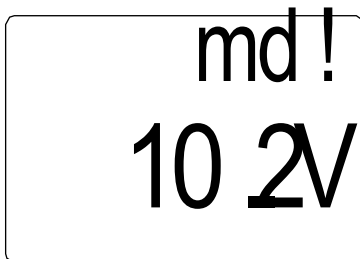

Lithium Battery

Your XR-2 radio system is equipped with a 5 year lithium battery backup system. This system is designed to protect and retain all radio programming in the event that the transmitter batteries drop below the required 9.0 volts, or the transmitter battery case is removed during battery changes. If after five years it becomes necessary to replace the lithium battery, return your system to the Horizon Service Center for repair (see address, page 23).

Memory Backup Screen

If the Memory Backup screen appears, this indicates that any programming changes made since the last time the system was turned on must be saved by pressing the MODE and CHANNEL buttons at the same time. If you do not save, the recent programming changes will be lost. If this screen appears for a second time, it is suggested that the XR-2 transmitter be returned to the Horizon Service Center for servicing (see Warranty Information, page 23).

Low Battery Screen/Lithium Battery Backup


When the voltage of the eight AA batteries drops below 9.0 volts, the XR-2's display screen will alternate between the Normal (see above) and Low Battery screen (BATT) and a continuous beeping will occur, indicating that the batteries need to be replaced before further use. The Low Battery screen is active during any of the three operating modes.




Accessing the System Mode

To enter the System Mode, press both the MODE and CHANNEL keys at the same time while turning on the transmitter power switch. By pressing the MODE key, you can now select either the model name input or data reset functions as shown here on the System Mode flow chart. Information for each function is located on the page number listed next to the function name on the flow chart.

To exit the System Mode, press the MODE and CHANNEL keys at the same time, or simply turn off the transmitter.

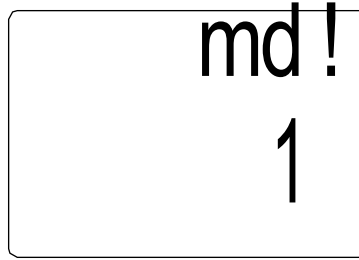


Model Name Entry, page 10

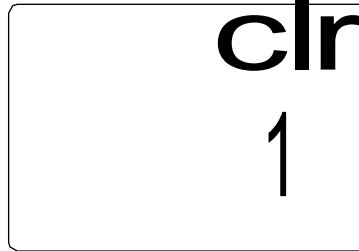

Data Reset, page 11

Model Name Entry (System Mode)


The XR-2 allows a three-digit name to be input for each of the two (2) models available. The current model, with name, will then be displayed in the Normal display screen. This feature is useful to help identify different models, setups, etc. For information on selecting models 1 or 2, please refer to the Model Select Function (page 13).

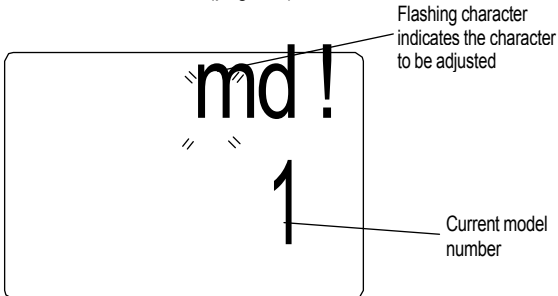

Accessing the Model Name Entry Function


To access the Model Name Entry function, follow the steps below:

Press the MODE and CHANNEL keys at the same time and hold to enter the System Mode



Press the CHANNEL key to select the character to be changed


Press the increase or decrease keys to select the correct letter/number to be used



1. Press the MODE and CHANNEL keys at the same time and hold.
2. Turn on the transmitter power switch to enter the System Mode.
3. MD1 should now be present on the screen.
4. Press the INCREASE or DECREASE keys to select the correct letter/number for the first character (flashing).
5. To change the remaining two characters, press the CHANNEL key until the desired character to be changed is flashing.
6. To access the Data Reset function, press the MODE key. To exit the System Mode, either turn the transmitter power switch off or press the MODE and CHANNEL keys at the same time.

Data Reset (System Mode)



The Data Reset function allows you to reset all the programming in the selected model (1 or 2) to the factory default settings. Before using the Data Reset function, it's important to enter the Model Select function and check to make sure the current model number indicated (1 or 2) is the model to which you want to reset to the factory default settings. The Model Select function is described in on page 13.

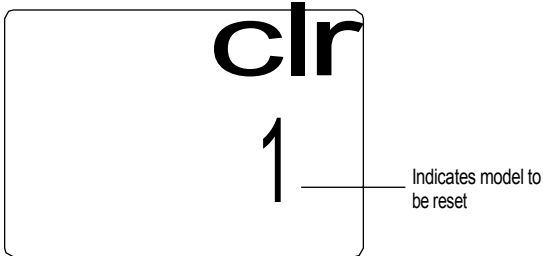

Accessing the Data Reset Function


To access the Data Reset function, follow the steps below:

Press the MODE key to access the Model Name Entry function



Press the INCREASE and DECREASE keys at the same time to reset (clear) all settings for the selected model to the factory default settings


1. Press the MODE and CHANNEL keys at the same time and hold.
2. Turn on the transmitter power switch to enter the System Mode.
3. Press the MODE key once until CLR appears on the screen.
4. Press the INCREASE or DECREASE keys at the same time to reset the data. To confirm that the selected model's programming has been reset, a beep will sound and the model number selected (1 or 2) will stop flashing.
5. To exit the System Mode, either turn the transmitter power switch off or press the MODE and CHANNEL keys at the same time.



Accessing the Function Mode


To enter the function mode, it's necessary to first turn on the transmitter's power switch. Next, press the MODE key until a beep is heard. The display will change to show the first function listed on the Function Mode flow chart as shown below. Press the MODE key to scroll down through the functions

one by one, as shown in the flow chart. Once the desired function has been reached, use the channel key to select the appropriate channel (if applicable). To adjust the values of the function, simply press the INCREASE (+) or DECREASE (-) keys until the desired value is displayed on the screen.

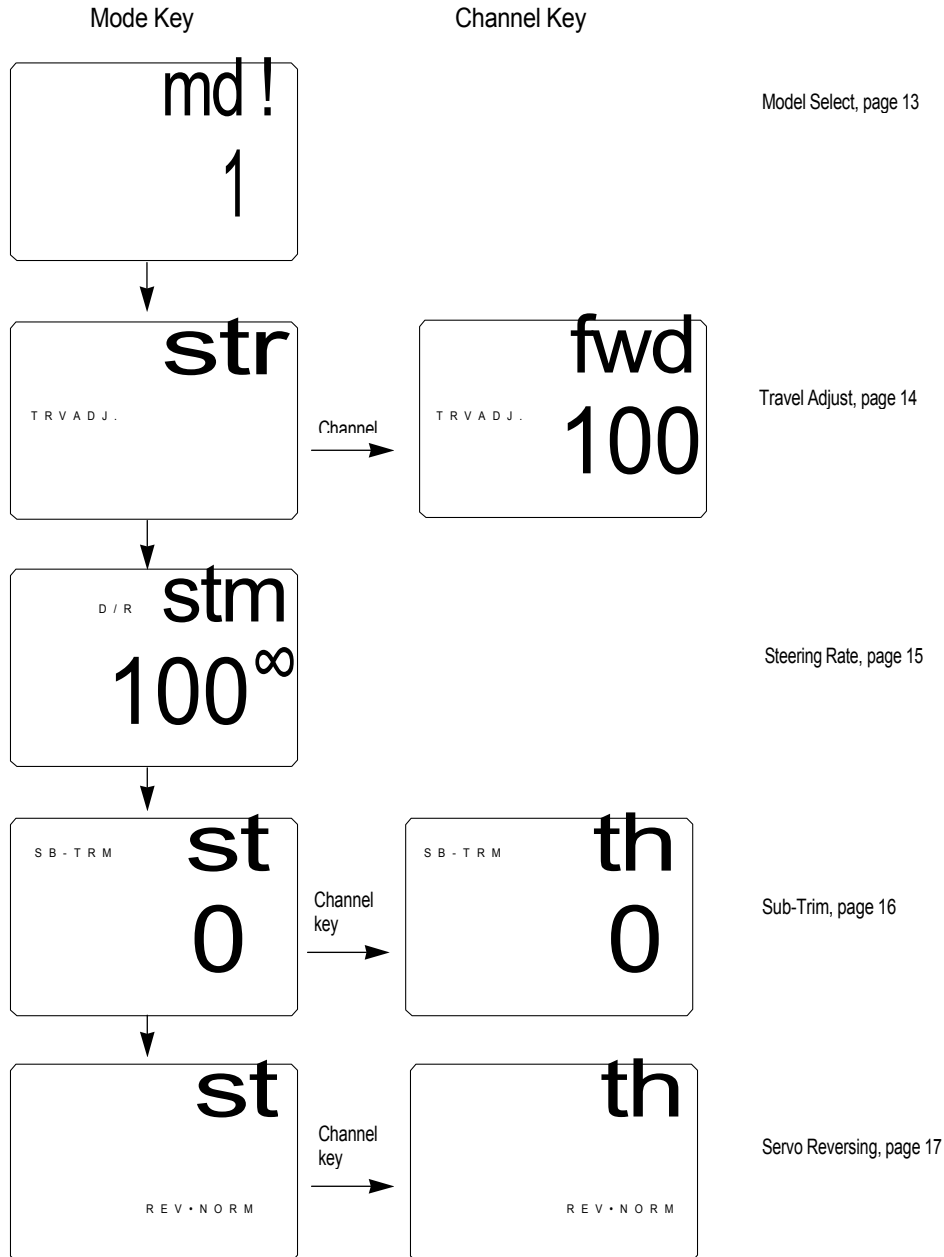

Model Select (Function Mode)


The XR-2 has memory for two (2) models. This feature allows for either two different models to be operated with the same transmitter (a second receiver and servos must be purchased separately), or one model with two (2) different race setups.

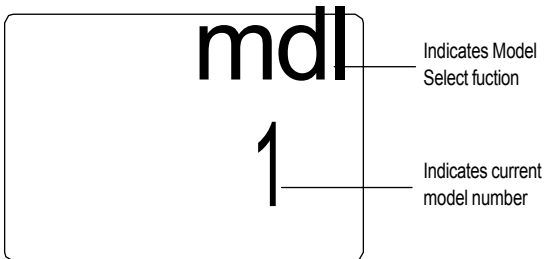

Accessing the Model Select Function

To access the Model Select function, follow the steps below:

Press the MODE key until MDL appears on the screen

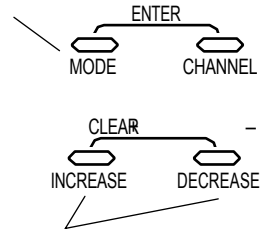

Press the INCREASE and DECREASE keys to select the desired model to be used (1 or 2)

1. Turn the transmitter power switch on.
2. Press the MODE key to access the Function Mode.
3. Press the MODE key until MDL appears on the screen.
4. Press the INCREASE or DECREASE keys to select the desired model number (1 or 2).
5. Press the MODE key to access the Travel Adjust function.
6. To exit the Function Mode, either turn off the transmitter power switch or press the MODE and CHANNEL keys at the same time.

Travel Adjust (Function Mode)

The Travel Adjust feature of the XR-2 allows the maximum travel of both the steering and throttle servos to be increased or decreased in each direction to achieve the exact servo movement needed. The adjustment range is from 0 % to 125%. The travel adjustment is factory set to 100% for both channels. The travel adjustment value displayed on the screen depends on the current position of the steering wheel, trigger, or trim lever to be adjusted. This feature is very useful either to maximize servo travel or to reduce servo over-travel to eliminate servo binding (servo moves further than control mechanism allows), without the need for mechanical linkage adjustment.

The screens below are accessed by turning the wheel to the desired direction to be adjusted (left or right) or moving the trigger to the forward or backward (brake) position.

STL
TRV ADJ. 100
Indicates current value


STR
TRV ADJ. 100
Indicates steering right travel adjustment
Indicates current value

FWD
TRV ADJ. 100
Indicates forward throttle travel adjustment
Indicates current value

BRM
TRV ADJ. 100
Indicates reverse (brake) travel adjustment
Indicates current value

Accessing The Travel Adjust Function

To access the Travel Adjust feature, follow the step below:

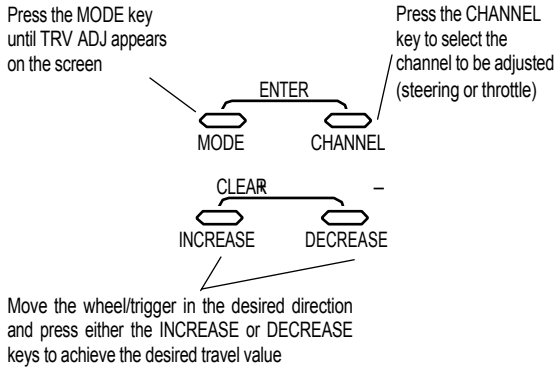

1. Turn on the transmitter power switch
2. Press the MODE key to enter the Function Mode.
3. Press the MODE key until TRV ADJ appears in small letters on the left side of the screen.
4. Press the CHANNEL key to select the desired channel to be adjusted. Steering = STR (steering right) or STL (steering left); Throttle = FWD (forward) or BRM (braking or reverse)
5. Move the steering wheel or trigger in the desired direction for adjustment (left/right, forward/reverse or brake). Press the INCREASE or DECREASE key to achieve the desired amount of travel. Move the wheel/trigger in the opposite direction to adjust the travel in the opposite direction.
6. Press the MODE key to access the Steering Dual Rate function.
7. To exit the Function Mode, either turn off the transmitter power switch or press the MODE and CHANNEL keys at the same time.


Note: When setting the travel adjust values for the steering function, it's suggested that if possible the maximum travel values be set to an equal value in both directions to maintain proper steering control.

Steering Rate (Function Mode)

The Steering Rate feature of the XR-2 allows the steering servo travel to be increased or decreased to the desired amount required. The values of the Steering Rate function are a percentage based from the travel adjust value set in the Travel Adjust section.



Example: Travel adjust value 100%, Steering value 80% — Maximum steering rate is now reduced to 80% of the maximum travel value (100%)

The Steering Rate function also works in conjunction with the Grip Lever B Steering Rate function (page 20) and acts as the maximum rate available through grip dial B. This feature allows the steering rate to be increased or decreased directly from the grip lever B while racing to maximize the steering rate needed for the particular track conditions.

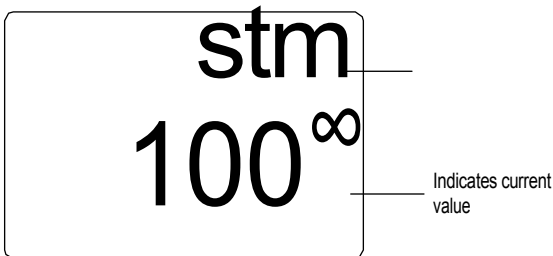

Accessing the Steering Rate Function

To access the Steering Rate Function, follow the steps below:




Press the INCREASE or DECREASE keys to achieve the desired steering rate value

1. Turn on the transmitter power switch.
2. Press the MODE key to enter the Function Mode.
3. Press the MODE key until D/R STM appears on the screen.
4. Press the INCREASE or DECREASE keys until the proper steering rate is achieved.
5. Press the MODE key to access the Sub-Trim function.
6. To exit the Function Mode, either turn off the transmitter power switch or press the MODE and CHANNEL keys at the same time.

Sub-Trim (Function Mode)


The Sub Trim function of the XR-2 is an electronic trimming feature that allows the neutral position of the servo on either the steering or throttle channel to be moved, while allowing the electronic trim lever for that channel to remain in the center position. This feature is very useful as it allows the servo arm/wheel position to be moved to help with control linkage installation, eliminating the need to make mechanical linkage adjustments.

Although the Sub-Trim function is a very useful feature, it is suggested that only small amounts of sub-trim be used so that no unwanted, non-equal servo travel is created. It's suggested that less than 30 points of sub-trim be used during adjustment. If more than 30 points of sub-trim are required, it's suggested that a mechanical linkage adjustment be performed.

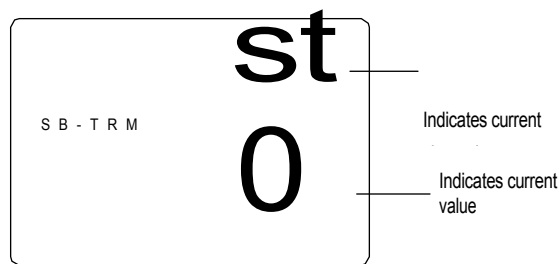

Accessing the Sub-Trim Function

To access the Sub-Trim function, follow the steps below:

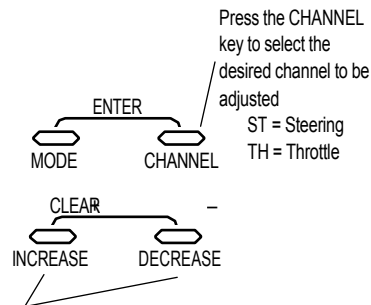


Press the INCREASE or DECREASE keys to achieve the desired sub-trim value

1. Turn on the transmitter power switch.
2. Press the MODE key to enter the Function Mode.
3. Press the MODE key until SB-TRIM appears in small letters to the left of the screen.
4. Press the CHANNEL key to select the channel to be adjusted (ST= Steering, TH= Throttle).
5. Press the INCREASE or DECREASE keys until the proper servo position is achieved.
6. Press the Mode key to access the Servo Reversing function.
7. To exit the Function Mode, either turn off the transmitter power switch or press the MODE and CHANNEL keys at the same time.


Servo Reversing (Function Mode)

The Servo Reversing feature of the XR-2 is a very convenient feature when setting up a new model. The purpose of the servo reversing function is to change the direction of the servo rotation in relation to the wheel/trigger movement. The Servo Reversing function is available for both the steering and throttle channels of the XR-2.

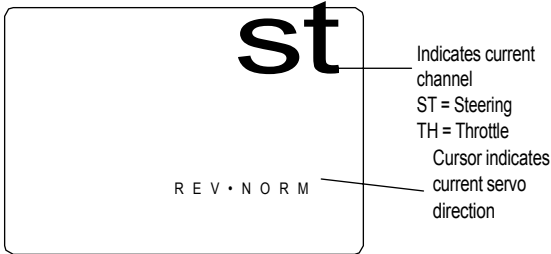


Accessing the Servo Reversing Function

To access the Servo Reversing function, follow the steps below:

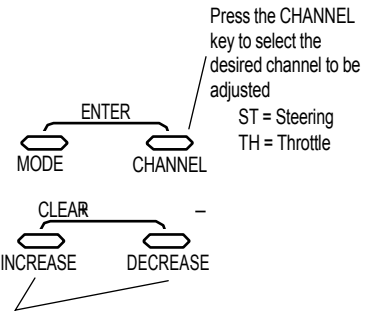

Press the INCREASE or DECREASE keys to move the cursor to the desired servo direction

1. Turn the transmitter power switch on.
2. Press the MODE key to access the Function Mode.
3. Press the MODE key until REV.NORM appears in small letters to the right of the screen.
4. Press the CHANNEL key to select the channel to be changed (ST = Steering, TH = Throttle).
5. Press the INCREASE or DECREASE keys to move the cursor to the desired direction.
6. To exit the Function Mode, either turn off the transmitter power switch or press the MODE and CHANNEL keys at the same time.




Accessing the Direct Trim Mode

The Direct Mode function of the XR-2 is accessible through the use of the electronic throttle or steering trim levers, as well as the two electronic grip levers (A&B) located on the upper portion of the grip handle. This function allows for quick trim adjustment of these controls, without the need to access these functions through the four keypad control keys.

To access the Direct Trim Mode function, turn on the transmitter power switch. Next, move the desired trim lever to be

adjusted. The appropriate screen for the selected trim lever will be displayed. To adjust, simply move the trim lever in the desired direction until the correct amount of trim is achieved. Once the desired trim is achieved, the screen will return to the Normal display screen after approximately five seconds from the last trim input. If the MODE or CHANNEL key are pressed any time during the five seconds, the system will return to the previous screen in use.

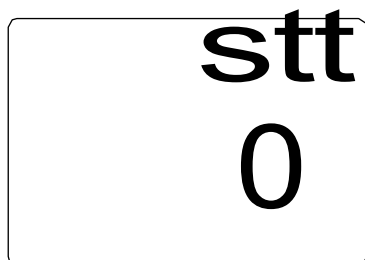

Steering Trim, page 19



Throttle Trim, page 19




Steering Dual Rate (Grip Lever B), page 20



Brake Travel Adjustment (Grip Lever A), page 21








Steering Trim (STT)

The XR-2 electronic steering trim lever, located just above the steering wheel, allows the center position of the servo to be manipulated in either direction to achieve precise centering of the steering assembly. Steering endpoint adjustment values (page 14) remain completely independent from the steering trim, unless the trim value exceeds the selected endpoint values. (For example: If trim value are set at 40 and endpoint values at 30, steering trim will override/alter the endpoint value.)

To adjust the steering trim servo position, move the electronic steering trim lever either to the left (+) or the right (-). As soon as the trim is moved, the STT steering trim screen will appear, and will continue to be displayed unless the trim lever is untouched for a period of five seconds. To reset the trim value to 0, press the INCREASE and DECREASE keys at the same time while the STT screen is displayed.

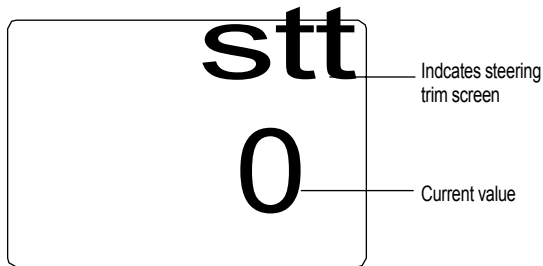

Press the INCREASE and DECREASE keys at the same time to reset the steering trim to zero


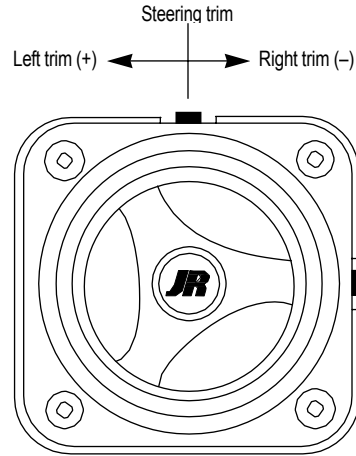


Steering Trim Location


Throttle Trim (THT)

The XR-2 electronic throttle trim lever, located to the right of the steering wheel, allows the center position of the servo to be manipulated in either direction to achieve precise centering of the throttle trigger neutral position. Throttle endpoint adjustment values (page 14) remain completely independent from the throttle trim, unless the trim value exceeds the selected endpoint values. (For example: If the trim value is set at 40 and the endpoint values at 30, throttle trim will override/alter the endpoint value.)

To adjust the throttle trim servo position, move the electronic steering trim lever either up (+) or down (-). As soon as the trim is moved, the THT throttle trim screen will appear, and will continue to be displayed unless the trim lever is untouched for a period of five seconds. To reset the trim value to zero, press the INCREASE and DECREASE keys at the same time while the THT screen is displayed.

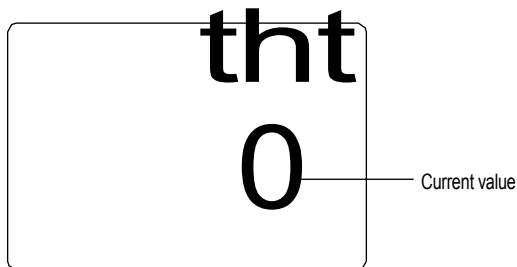


Press the INCREASE and DECREASE keys at the same time to reset the throttle trim value to zero

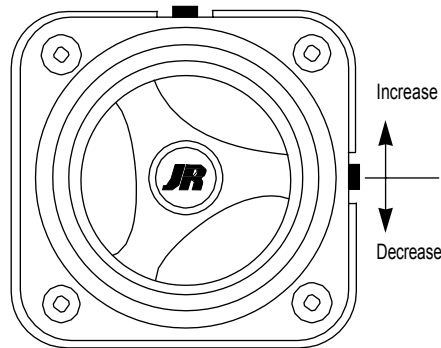

Throttle Trim Location






Steering Dual Rate Trim Adjustment STG (Grip Lever B)


The steering dual rate adjustment, located at grip lever B, allows the dual rate value (maximum servo travel) to be increased or decreased within a range from 100% through 40% of the total dual rate value established in the Steering Rate function (page 15). This function is very useful in race conditions as it allows you to custom tailor the steering radius and sensitivity for the current track conditions. Please note that since the dual rate value shown in the STG screen

is the percentage of the value established in the Steering Rate function, the value will not always increase or decrease, or beep once for each time the grip lever B is moved.

To adjust the steering dual rate value, move the electronic grip lever B either left (-) or right (+). As soon as the trim is moved, the STG steering dual rate screen will appear, and will continue to be displayed unless the grip lever B is untouched for a period of five seconds. To reset the trim value to the factory preset 70% setting, press the INCREASE and DECREASE keys at the same time while the STG screen is displayed.


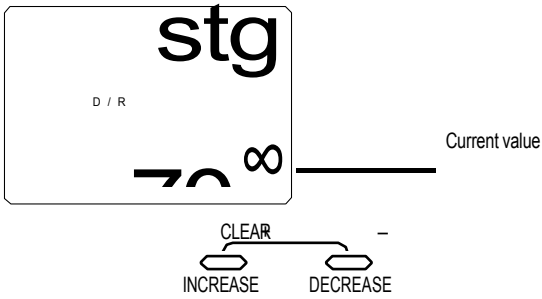


Press the INCREASE and DECREASE keys at the same time to reset the steering dual rate trim to the factory preset (70%)

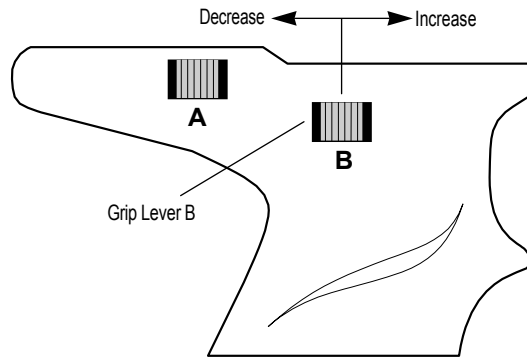

Brake Endpoint Adjustment BRG (Grip Lever A Throttle Travel Adjust)


The brake endpoint adjustment, located at grip lever A, allows the maximum servo travel on the braking side of the throttle trigger to be increased or decreased from 100% to 0% (off). This function is very useful in race conditions as it allows the racer to custom tailor the "panic" brake value to maximize the cars braking power for the current track conditions. Please note that since the brake endpoint value shown

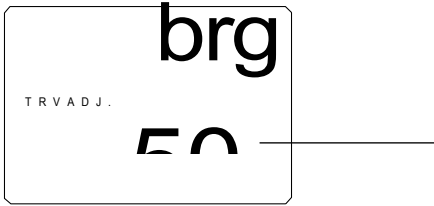


Press the INCREASE and DECREASE keys at the same time to reset the brake endpoint trim value to the factory preset (50%)

in the BRG screen is a percentage of the total braking value established in the Travel Adjust function (page 14), the value will not always increase or decrease, or beep once for each time the grip knob A is moved.

To adjust the brake endpoint value, move the electronic grip lever A either left (-) or right (+). As soon as the grip lever is moved, the BRG Travel Adjust screen will appear, and will continue to be displayed unless the grip lever A is untouched for a period of five seconds. To reset the brake endpoint value to the factory preset 50% setting, press the INCREASE and DECREASE keys at the same time while the BRG screen is displayed.

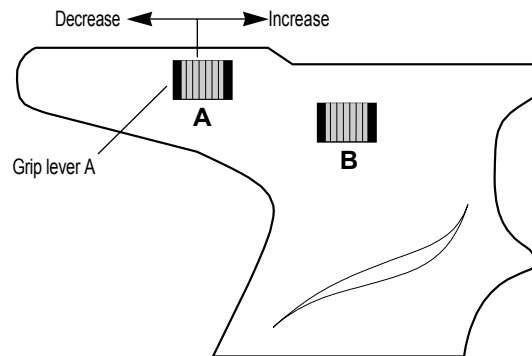



XR-2 Data Sheet

Model Name _____

Function Mode

TRAVEL ADJUST	STEERING		THROTTLE	
	STR	STL	FWD	REV
STEERING DUAL RATE	%			
SUB-TRIM				
SERVO REVERSING	REV. NORM		REV. NORM	

DirectMode

TRIM VALUES	STEERING		THROTTLE	
STEERING DUAL RATE BRAKE	Grip Lever B	%		
TRAVEL ADJUST	Grip Lever A			%

Model Name _____



Function Mode

TRAVEL ADJUST	STEERING		THROTTLE	
	STR	STL	FWD	REV
STEERING DUAL RATE	%			
SUB-TRIM				
SERVO REVERSING	REV. NORM		REV. NORM	

DirectMode

TRIM VALUES	STEERING		THROTTLE	
STEERING DUAL RATE BRAKE	Grip Lever B	%		
TRAVEL ADJUST	Grip Lever A			%

Frequency Chart



VIII. FREQUENCY CHART					
FREQUENCY (MHz)	CHANNEL	FREQUENCY (MHz)	CHANNEL	FREQUENCY (MHz)	CHANNEL
26.995	1	75.530	67	75.770	79
27.045	2	.550	68	.790	80
.095	3	.570	69	.810	81
.145	4	.590	70	.830	82
.195	5	.610	71	.850	83
.255	6	.630	72	.870	84
75.410	61	.650	73	.890	85
.430	62	.670	74	.910	86
.450	63	.690	75	.930	87
.470	64	.710	76	.950	88
.490	65	.730	77	.970	89
.510	66	.750	78	.990	90



Warranty And Service Information

Important Note: Be sure to keep your original dated sales receipt in a safe place as you will be required to provide proof of purchase date for the equipment to be serviced under warranty.

Warranty Coverage

Your new JR Remote Control Radio System is warranted to the original purchaser against manufacturer defects in material and workmanship for 365 days from the date of purchase. During this period, Horizon Service Center will repair or replace, at our discretion, any component that is found to be factory defective at no cost to the purchaser. This warranty is limited to the original purchaser of the unit and is not transferable.

This warranty does not apply to any unit which has been improperly installed, mishandled, abused or damaged in a crash, or to any unit which has been repaired or altered by any unauthorized agencies. Under no circumstances will the buyer be entitled to consequential or incidental damages. This limited warranty gives you specific legal rights; you also have other rights which may vary from state to state. As with all fine electronic equipment, do not subject your radio system to extreme temperatures, humidity or moisture. Do not leave it in direct sunlight for long periods of time.

Repair Service Directions

In the event that your JR radio needs service, please follow the instructions listed below.

1. Check all on/off switches to be sure they are off. This will speed the repair process of checking battery condition.
2. Return your system components only (transmitter, receiver, servos, etc.). Do not return your system installed in a model car, boat, etc.

er, servos, etc.). Do not return your system installed in a model car, boat, etc.

3. Preferably, use the original carton/packaging (molded foam container), or equivalent, to ship your system. Do not use the system carton itself as a shipping carton—you should package the system carton within a sturdy shipping container using additional packing material to safeguard against damage during transit. Include complete name and address information inside the carton, as well as clearly writing it on the outer label/return address area.

4. Include detailed information explaining your operation of the system and problem(s) encountered. Provide an itemized list of equipment enclosed and identify any particular area/function which may better assist our technicians in addressing your concerns. Date your correspondence, and be sure your complete name and address appear on this enclosure.

5. Include your name, mailing address, and a phone number where you can be reached during the business day.

6. **Warranty Repairs.** To receive warranty service you must include your original dated sales receipt to verify your proof-of-purchase date. Providing that warranty conditions have been met, your radio will be repaired without charge.

7. **Normal Non-Warranty Repairs.** Should your repair cost exceed 50% of the retail purchase cost, you will be provided with an estimate advising you of your options.

Within your letter, advise us of the payment method you prefer to use. The Horizon Service Center accepts VISA or MasterCard, or we can return C.O.D. cash-only. If you prefer to use a credit card, include your card number and expiration date.

Mail your system to: Horizon Service Center
4105 Fieldstone Road
Champaign, IL 61821
Phone: (217) 355-9511

